


All models

Pull belt out completely and check for cut fibers and other damage such as burnt spots caused by cigarettes.

Check that automatic reel functions correctly.

Check locking function by pulling belt out quickly.

Check belt strap for twisting.

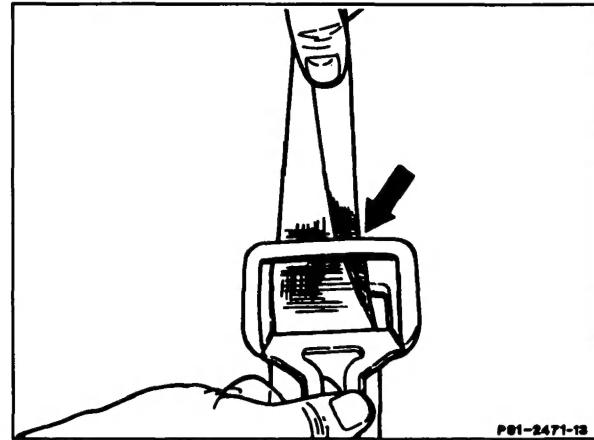

P01-2471-13

**Note:** If customer complains that belt does not roll up neatly, check whether belt is guided back manually as specified or whether it is twisted 180° behind panel caused by improper handling. Remove panel for this purpose.

If customer refuses replacement of damaged belt, this should be noted on repair order.

